

Alinco DJ-580

Split:

- Func & 1
- 1 to cycle

Tone Encode:

- Hold Func, then 4
- Rotate main dial
- Press UHF or VHF
- Enable by pressing FUNC & 6

Power Level:

- Hold Func, then 5

Master Reset:

- Hold Func & turn on

Program memory:

- In VFO mode set freq,
tone & split
- Press key D.
- Turn main knob for mem #
- Func/D to store
- MR to exit

Recall Memory:

- Press key D.
- Turn main knob for mem
#

Air Band Receive:

- Func & VHF